


Removing the OLD Ballast

- 1) Remove cover, expose the Ballast (PCB in the middle)
- 2) Drill out the rivets holding the Ballast PCB (or leave in, unconnected)
- 3) Cut the wires – remove the PCB

Fitting the illuminous F13T5 LED tube [Model Number: EV-LED-T5-21](#) :

- 1) You Only need 1 wire to each Socket at each end of the Tube. Some Fixtures have 2 Wires, some have 1 wire to each socket. Pick One (This fixture has 2 wires, you can use 1, or both. If one, then sap off the unused wire with a wire nut).
- 2) For the Tube, One end is Positive, the other end is GND / Negative
- 3) Change the wiring to look like this:

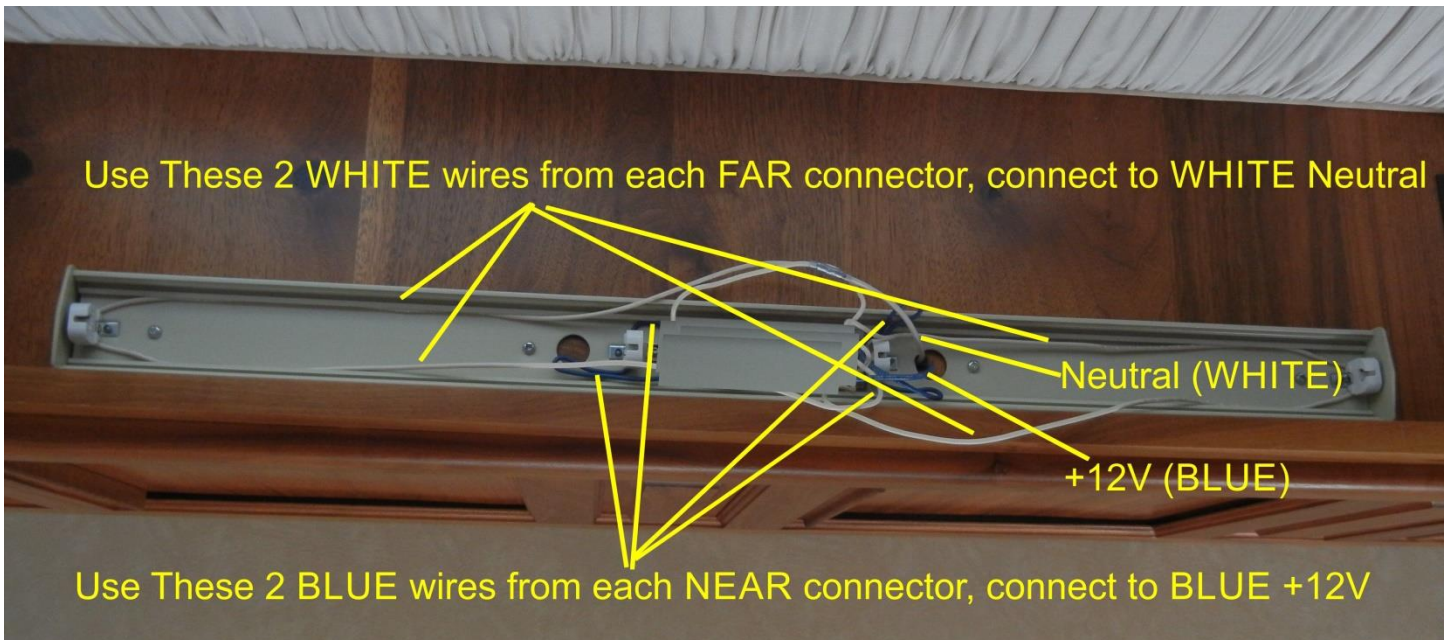

- a) Wire One End to Positive (just one or 2 Wire from each End Socket)
- b) Wire the other end to Negative (just one or 2 wire from each Socket)